


# Update your Amuri.Net B315 Modem's firmware

---

This page gives you step-by-step instructions on how to update your Amuri.Net B315 Modem's firmware.

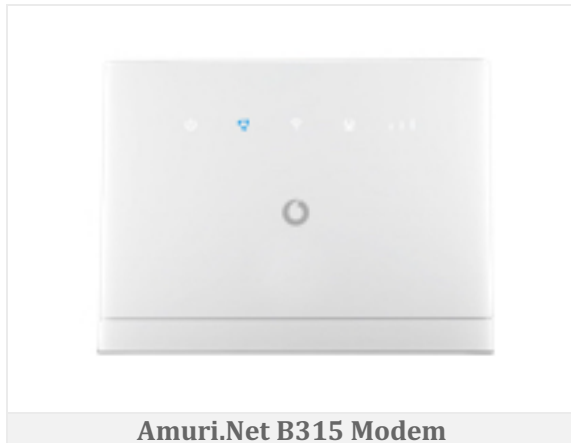

The latest firmware version is **21.329.01.00.1085**.

## Important things to know

- It will take about 15 mins to update your software. While you're doing this your broadband service will be impacted. If you have a phone connected to your modem, it will also be affected
- Around 60MB of data is used to update your modem.
- When you update your modem, your Wi-Fi password will need to be changed and any customised or advanced configuration will be removed
- Improved speed is dependent on cell sites in your area being upgraded

## Before you start

Before you get started have a quick look at the check list below to make sure you have everything you need for the update. You'll need:


- A Amuri.Net B315 Modem
- Your modem needs to be working so that you're connected to the internet
- Either a phone, tablet laptop or computer connected to your modem by Wi-Fi or an Ethernet cable
- If you're using an Apple or Android device you'll also need to have downloaded the [Huawei HiLink app](#) to complete the update

# Step-by-step instructions to update your modem


## iPhone or iPad

1. Make sure your iPhone or iPad is connected to your modem by Wi-Fi.
2. Download and install the [HUAWEI HiLink \(Mobile WiFi\) app](#), which is available for free from the Apple app store
3. Open the HUAWEI HiLink app
4. The app will prompt you for login details for your device
5. Login as an admin user  
The default username and password are both 'admin'


6. You will see a notification that an update is available, click UPDATE

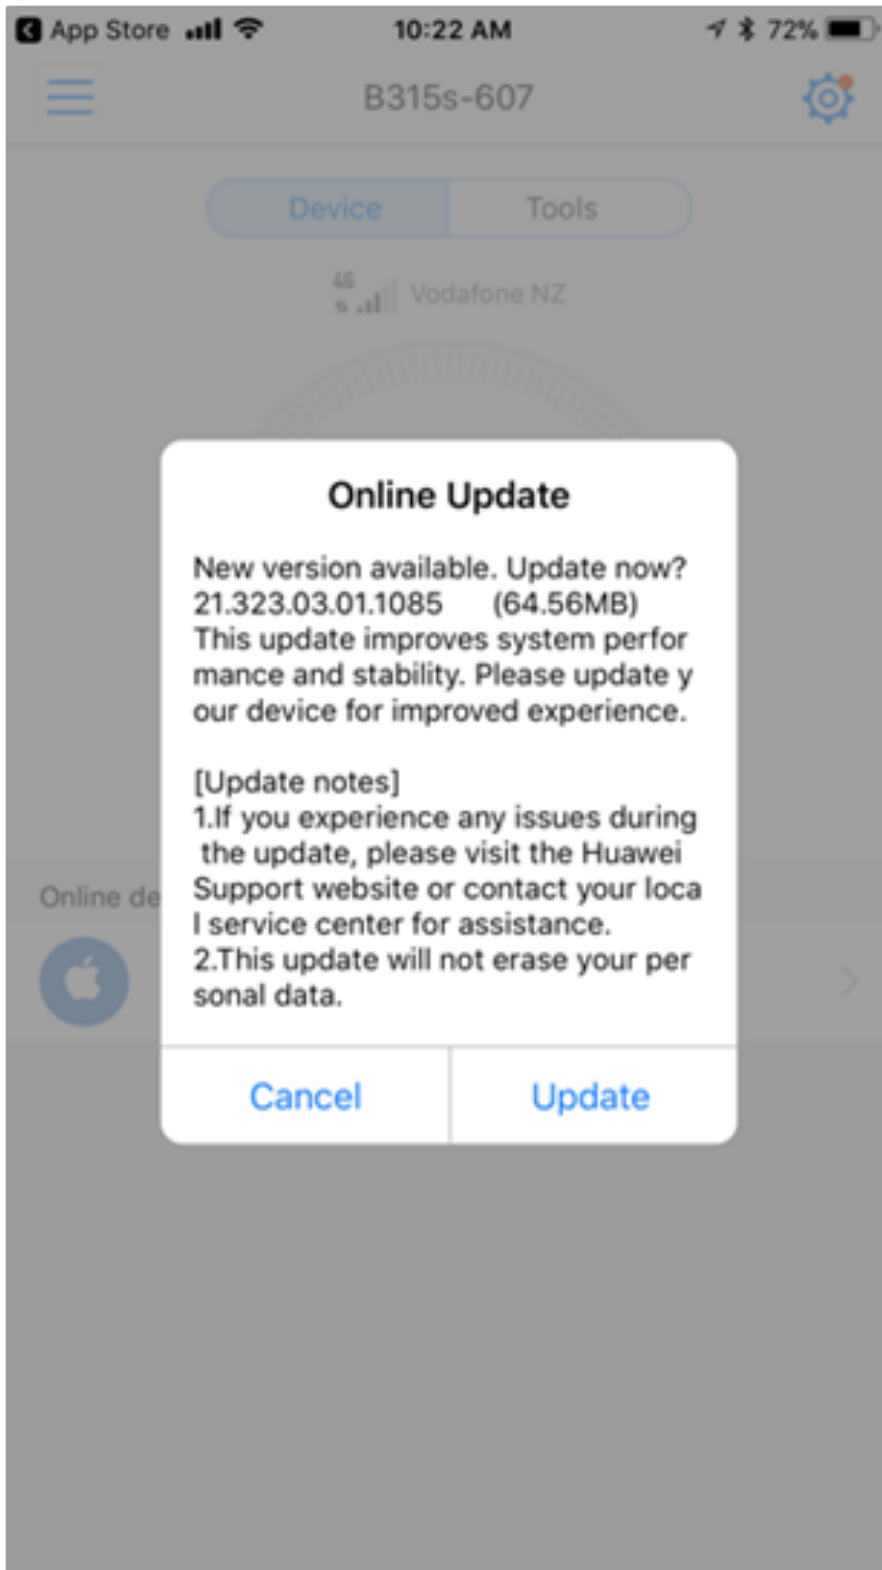

7. The software will start downloading to your modem

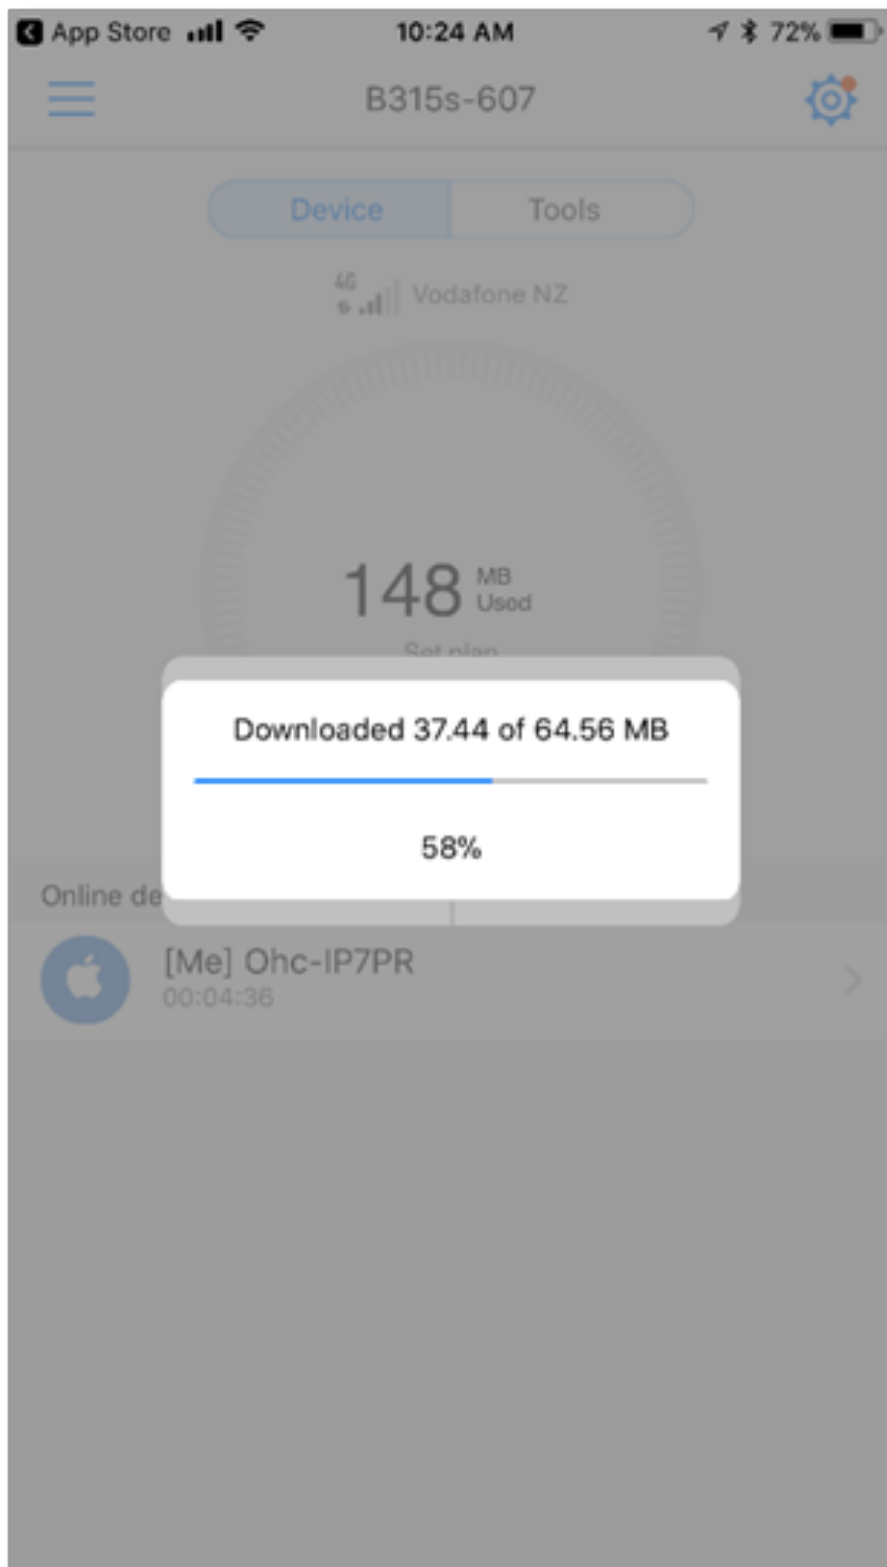


8. Once downloaded the modem will start updating itself

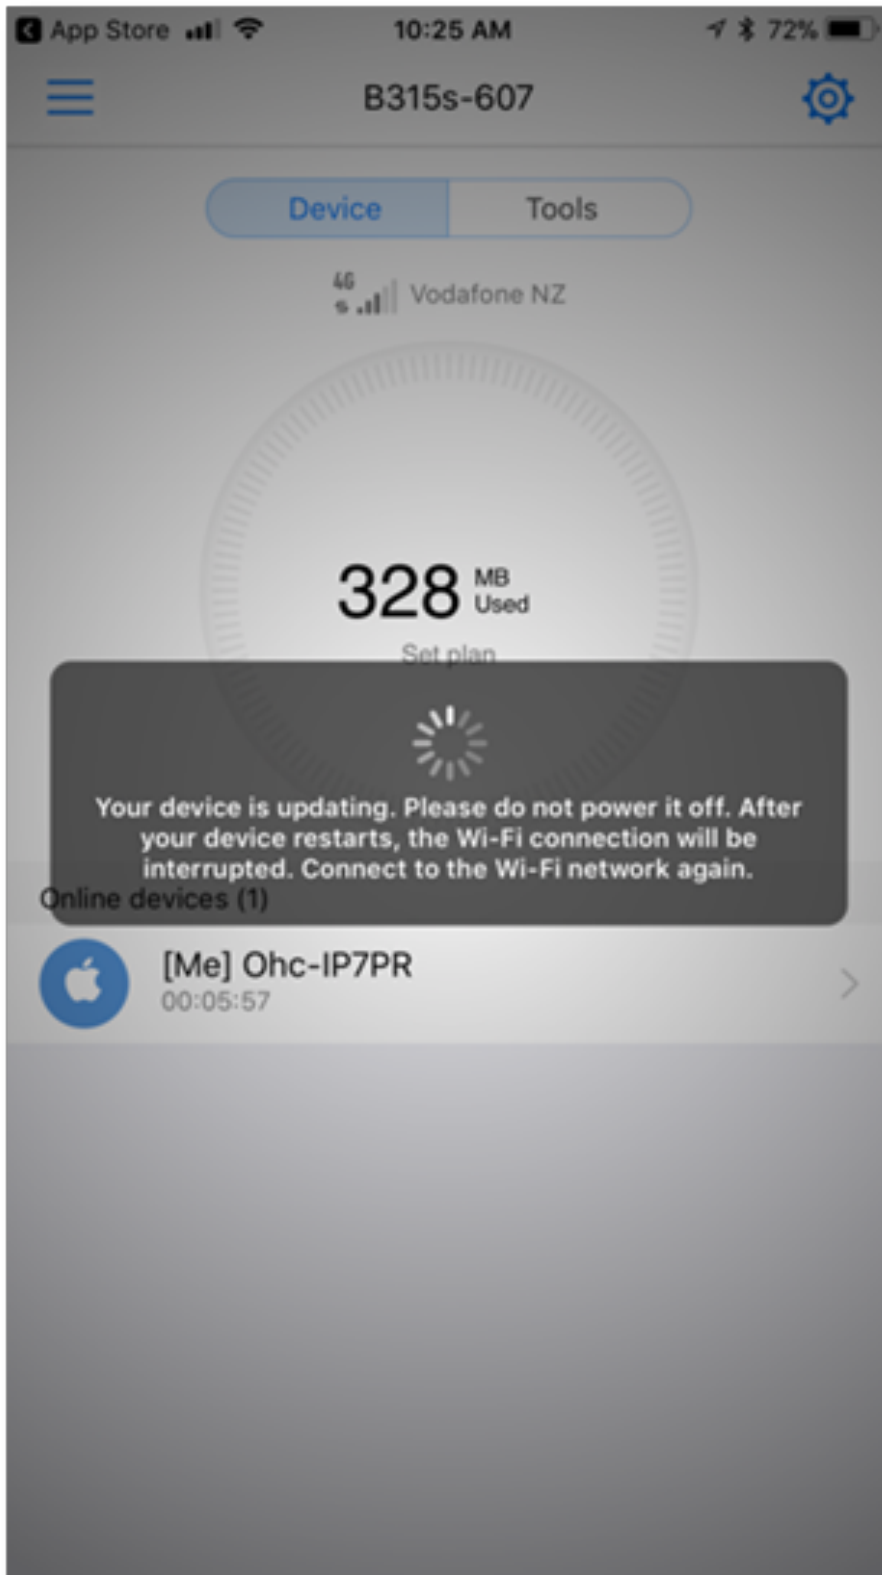


9. Your modem will shut off the Wi-Fi connection and once available again you will need to reconnect to your Wi-Fi once the modem has completed updating its software and restored the Wi-Fi.



10. If you have the default admin login and password, you will be prompted to update this

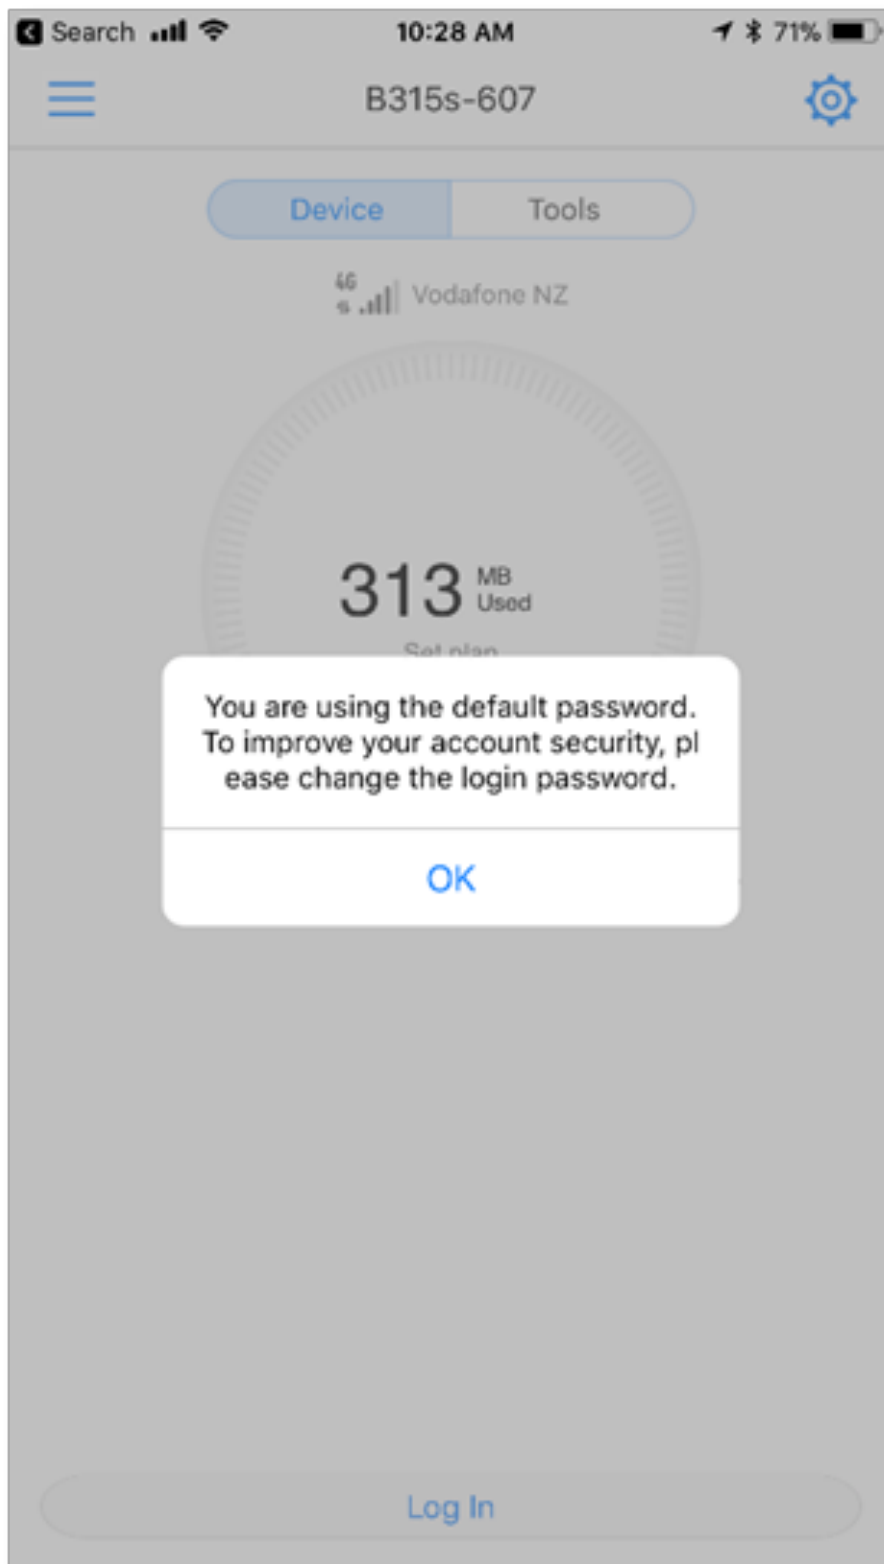


11. You'll need to enter 'admin' as your current password and think of a new one and confirm it

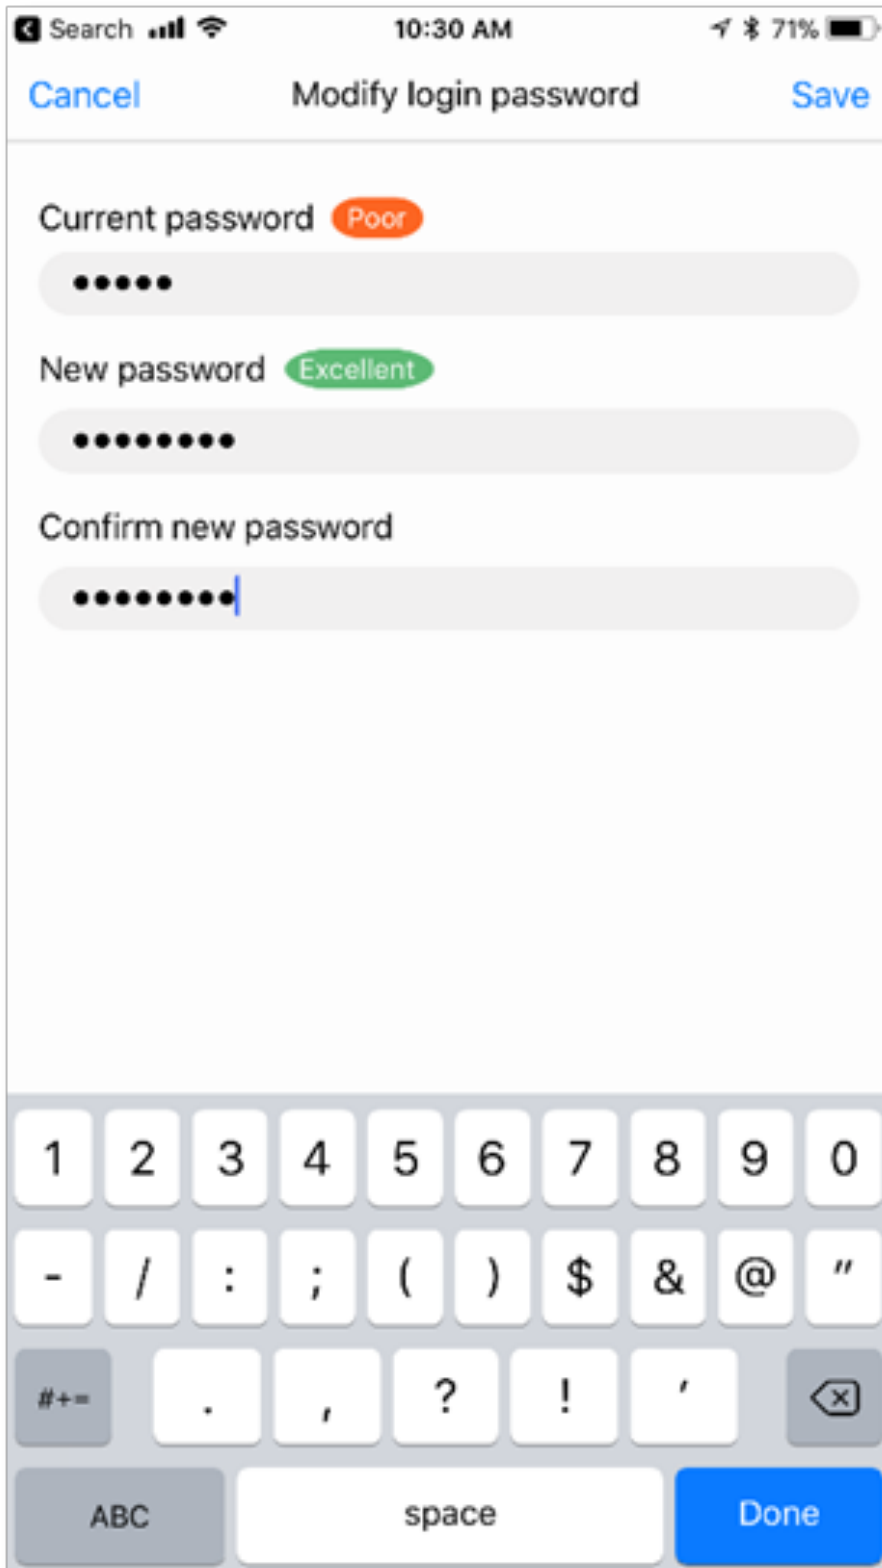

12. You'll then be prompted to login as administrator - use your new password!



13. In the app, tap the SETTINGS icon - blue gear image top right to check on your device's settings.

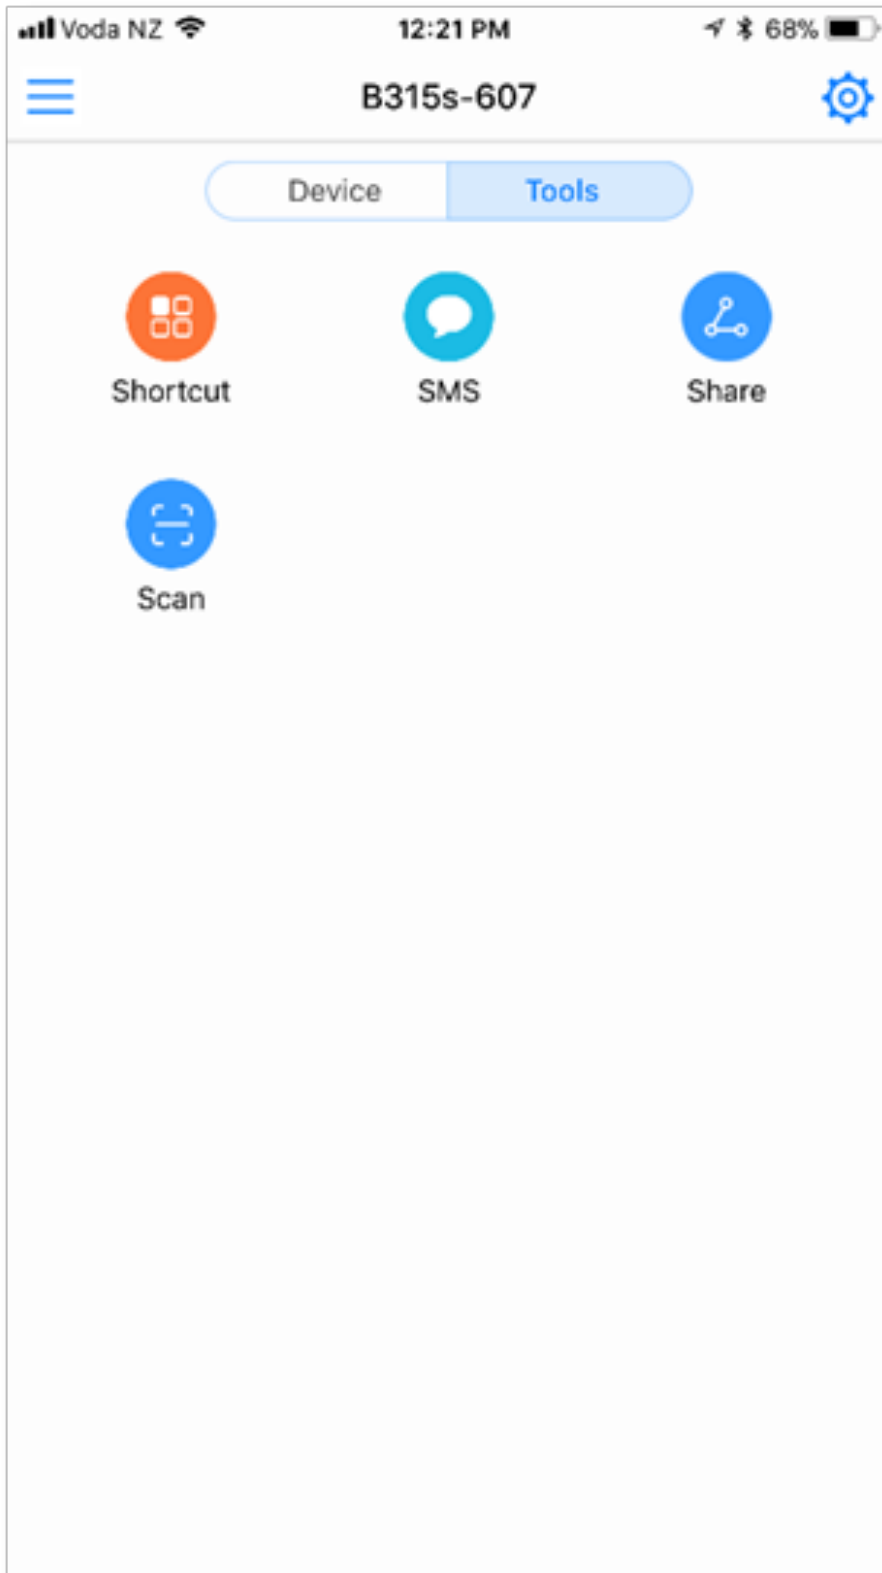

14. There you'll be able to see info about your device as well as where to see when updates are available in the future.

